



e- mail biuro@solgaz.com.pl

Assembly and operating instructions
OF CERAMIC GAS HOB
for kitchen furniture arrangement

GPC-4+1

Dear Customer,

Congratulations on your reasonable decision to purchase our ceramic gas panel to be built in all types of kitchen furniture sets.

Our panel can serve as a part of advanced equipment of a modern kitchen furniture set. Not only is it highly sophisticated, but it also looks good and is resistant to extreme temperatures. Its unquestioned advantages include: low operating costs, easy operation and environmental-friendly parameters, which you will be able to evaluate in the course of daily use.

Have fun with preparing your perfect tasty meals.

Yours sincerely, SOLGAZ

The ceramic gas hob must be connected to a gas source by an authorized person(certified installer)

Dear Sir, Dear Madam, We guarantee that your new gas hob will operate correctly.

However, should you have any problems with using this heating panel, our Company Service will offer you immediate and professional assistance. We want to guarantee full comfort of in daily use of our product to all those who have put their trust in our company.

CONTENTS

1. GENERAL INFORMATION	page
1.1. Application of the plate	4
1.2. Technical data of the GPC-4+1 plate	4
1.3. Design of the gas plate	4
2. REQUIREMENTS FOR HOB INSTALLATION	
2.1. Requirements for rooms	6
2.2. Mounting the plate in kitchen countertop.	6
2.3. Gas installation.	7
2.4. Electrical installation.	8
3. USING THE GAS PLATE.	8
3.1. Initial activities.	9
3.2. Switching on and setting the heating power of burners.	9
3.3. Description of operating condition with intelligent reheating function.	10
3.4. Switching off the burners.	10
3.5. Switching the controller lock on and off.	10
3.6. Residual heat indicator.	11
3.7. Choice of dishes.	11
3.8. Utilization of combustion gas heat.	12
3.9. Reduction of operating time	12
4. COOKER CLEANING AND MAINTENANCE	12
4.1. Cleaning the ceramic panel	12
4.2. Cleaning the plate strips.	13
4.3. Control and supervision over gas, electrical and ventilation systems	13
5. INSTRUCTIONS FOR THE INSTALLER	14
5.1. General.	14
5.2. Adapting the cooker for different type of gas	14
5.3. Maintenance and inspection of cooker components	15
6. HANDLING DEFECTS – error signaling	15
7. CONTROLLER ALARM CONDITIONS SIGNALING.	15

1. GENERAL INFORMATION

1.1. Application of the plate.

The GPC-4+1 type plate is a ceramic panel with 4 gas burners located underneath. This is the newest generation of gas cookers where special gas burners controlled by an electronic system process heat generated through gas combustion into infrared radiation. Radiation infiltrating the ceramic panel heats the dishes positioned above the heating pads. Heating pads are indicated graphically on the panel. This cooker is provided with touch sensors for controlling its operations. It is fit for building in a single kitchen countertop or in a combined countertop. It is designed for non-professional (home) preparation of food and for household use.

Advanced solutions applied in the hob construction and design give it a nice esthetical appearance while ensuring comfortable and safe use.

1.2. Technical data of the GPC-4-1 plate

Table 1.

Parameters of the plate	Unit	Type of gas			
		2E G20	2Lw G27	2Ls G2.350	3B/P G30
Rated pressure	mbar	20		13	37
Gas nozzle of the f 90 (small) burner	mm	0,75	0,82	1,00	0,43
Gas nozzle of the f 120 (medium) burner	mm	1,00	1,10	1,35	0,60
Gas nozzle of the f 120 (medium) burner	mm	1,00	1,10	1,35	0,60
Gas nozzle of the f 90 (small) burner	mm	0,75	0,82	1,00	0,43
Rated heating power of the appliance	kW	≈5,5kW			
Rated heating power of φ 90 burner	kW	1,07	1,02	0,94	0,93
Rated heating power of φ 120 burner	kW	1,81	1,72	1,75	1,60
Rated heating power of φ 120 burner	kW	1,81	1,72	1,75	1,60
Rated heating power of φ 90 burner	kW	1,07	1,02	0,94	0,93
Gas connection		R1/2"			
Operating voltage	V	12 V			
Power adapter supply voltage	V	230 V/50 Hz			
Parameters of the power adapter		12V DC/3,5A			
Protection class of the housing		IP-40			
Dimensions (L x W x D)	mm	580x495x110			

- The entire electrical installation of the hob is supplied with a special power pack and is prepared as a low voltage system.
- In terms of fire risk, the hob is classified as a safe device.

1.3 Design of the gas hob

The hob (fig. 1) has **four** injector gas burners rated as specified in the table above, with a ceramic insert, equipped with igniting electrodes and ionizing detectors of burning gas. Burners in which catalytic combustion of gas takes place produce **infrared radiation**. They are covered with a ceramic panel with four separate hot fields above the ceramic burners, indicated graphically on the panel, and one hot field above two combustion gas ducts of 120mm gas burners, which **do not consume gas**.

Because the hob controls must be supplied with **12 VDC** power, the hob is supplied from a **12V** power source via a special power pack to be connected to the 230V household system, included with the delivered hob. The gas source can be a gas network, or a liquid gas cylinder. Through replacing the working nozzles according to **Table 1** and changing the size of air diaphragm according to **Table 4**, the user is able to adapt the hob to burning a different type of gas. Nozzles for all applicable types of gas are included in this manual.

-A **touch control panel** is located in the front part of the hob (fig. 2). It is for controlling and regulating the specific gas burners of the cooker. It also displays relevant messages of the hob operating conditions.

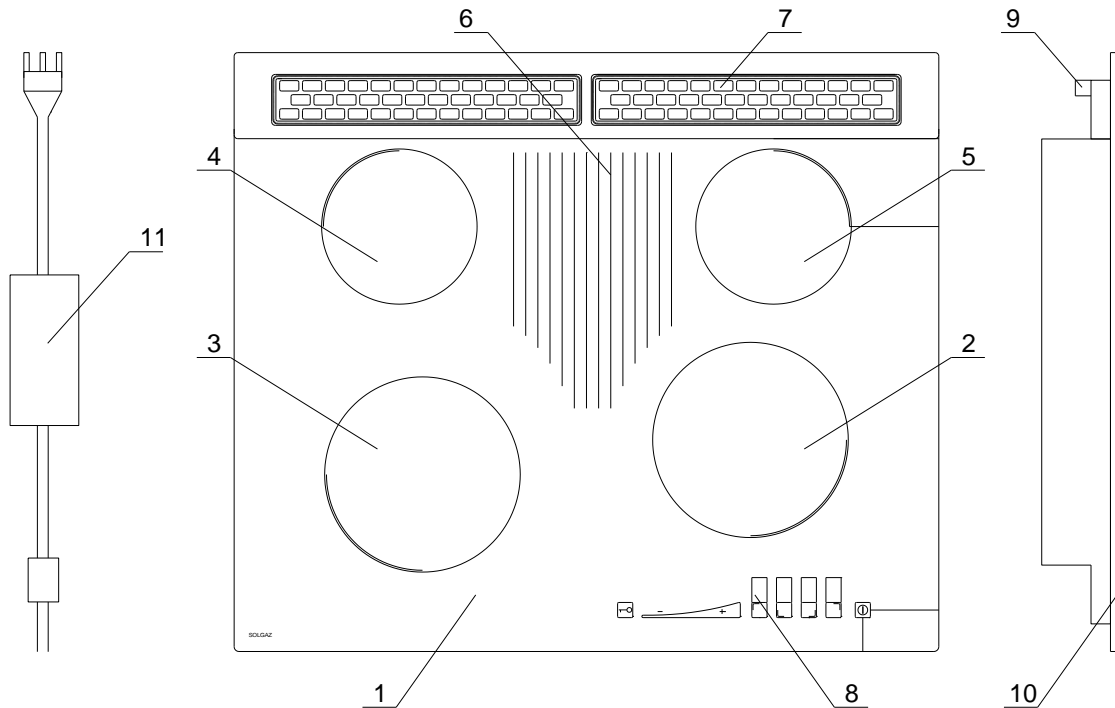


Fig. 1

1 – ceramic plate, **2** – hot field $\varnothing 120$, **3** – hot field B $\varnothing 120$, **4** – hot field C $\varnothing 90$, **5** – hot field C $\varnothing 90$, **6** – hot area, **7** – combustion gas outlet, **8** - controller, **9** – gas inlet, **10**– power supply socket, **11** – power adapter

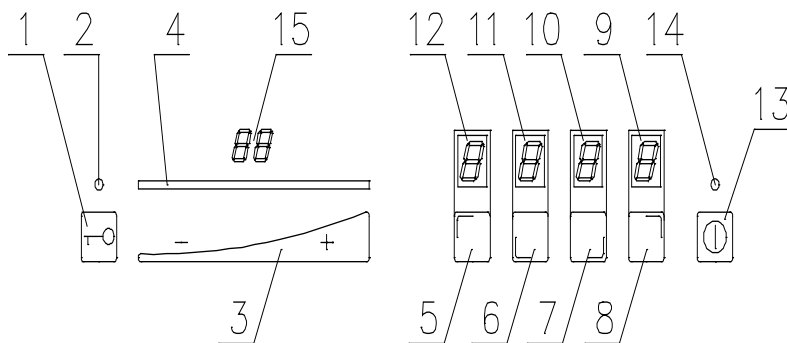


Fig. 2 (control panel - item 8. on fig. 1.)

1 – child lock, **2** – lock indicator, **3** - power setting slider, **4** – power setting indicator, **5,6,7,8** – burner selection fields, **9,10,11,12** – digital indicator of burner power settings, **13** – on/off switch **14** – on/off indicator, **15**- timer display/hot area temp. regulation

2. REQUIREMENTS FOR COOKER INSTALLATION

All activities related to hob installation and connection to gas and electrical system should be performed by a certified installer.

NOTE:

Before installing the hob and connecting it to the gas installation, make sure it is adapted for the right type of gas supply and that this gas corresponds to the gas type given on the hob's rating plate. Otherwise, adapt the hob through replacing the nozzles and air diaphragms with the types appropriate for the given type of gas.

In case of any doubt as to the type of gas supplied via the network, please contact your gas supplier.

Proceeding in such case is described in details under 5.2 of the instruction.

2.1. Requirements for rooms

The rooms designated for installing the cooker should be dry and airy, with efficient natural ventilation.

3. Installation and assembly in furniture

All activities related to the assembly and connection of the stove to the gas and electric systems must be performed by an authorized installation technician.

Assembly of the hob in kitchen countertops

Due to the large size of the hob it is not recommended to install it in the countertops of individual kitchen cabinets. A composite kitchen countertop where the gas hob is to be installed must be permanently fixed to the cabinets or permanently connected with other elements of the furniture. In order to place the hob in the kitchen countertop or in a composite countertop, it is necessary to make an opening in it with the following dimensions, depending on the type of the hob:

540 x 465 mm . If the hob is to be installed over an oven, the opening where the hob is to be installed must be symmetric.

If the hob is to be placed next to cabinets standing on the countertop or in the corner of the room, the plate of the gas hob must be placed at least 150 mm away from the side of the cabinet or wall.

The way to install and fix a 4-burner hob is presented **in the drawing below.**


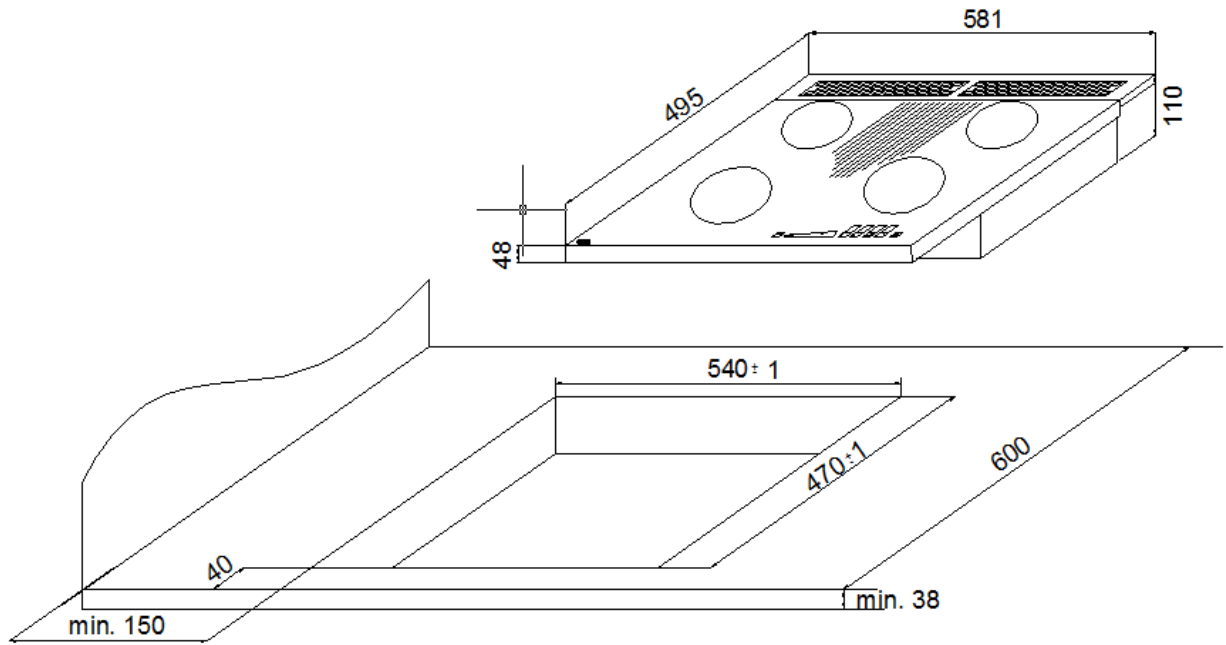


Fig. 3. Instalation

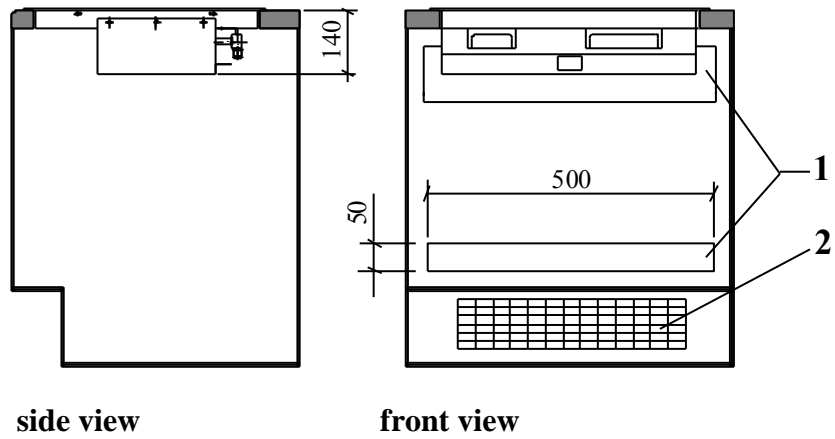

side view

front view

Fig. 4. Assembling drawing
 1- VENTILATION AIR INLET
 2- VENTILATION AIR INLET WITH MESH

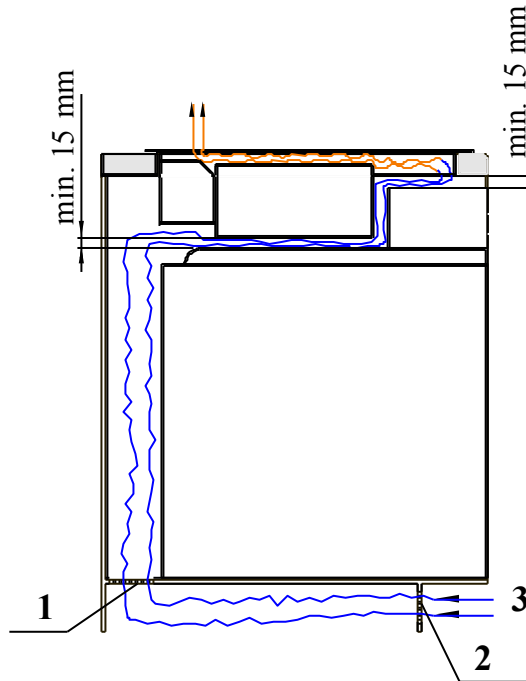


Fig. 5. Hob with oven arrangement

1 – VENTILATION AIR INLET IN THE BOTTOM PART OF THE SHELF; 2 – VENTILATION AIR INLET WITH MESH; 3 – AIR

REMARKS:

- Due to the height of the hob, it is impossible to install it over an oven in standard kitchen cabinets
- If the kitchen cabinet has a back wall, it is absolutely necessary to cut out ventilation openings in it, as shown **on the drawing fig. 5**,
- Because of the need to assure circulation of air, an air inlet grate should be installed in the skirting of the cabinet **fig. 4**.

Gas supply system

- **GPC-4+1** have a vertical connector pipe ending with an R1/2" inside thread (ISO 7-R1/2) for connecting the hob to the gas supply system. It is recommended that the hob be connected to the gas supply system with a flexible connecting hose with a **safety certificate**.
- If the hob is supplied by means of a flexible connecting hose, it is necessary to use an R ½ /G ½ screw-in/screw-on elbow. A cut-off valve must be installed in the system to stop the supply of gas to the hob, as well as a gas filter preventing the nozzles from clogging due to polluted gas.
- If the hob is to be supplied with liquid gas from a gas cylinder, a ø10/R1/2" connector pipe is to be screwed into the gas supply connector pipe. A **liquid gas regulating valve** needs to be installed on the cylinder valve. The regulating valve is connected with the hob with a flexible hose for liquid gas (max. length 3 m) with clamps on both ends. **The regulating valve and the flexible hose must have safety certificates.**
- *The above activities, for the sake of the user's safety, should be performed by an authorized gas installation technician!*

2.4. Electric system

The control system of the hob is supplied with 12 V direct current through a power supply. In order to assure correct and safe operation of **GPC-4+1** hobs, it is necessary to provide an electric socket

(230 V/50 Hz) close to the location of the stove in order to connect the hob's power supply. The electric socket should have a grounding bolt and cannot be located directly over the hob, at the distance of less than **10 cm away from the side** of the stove and at least **10 cm above** the hob plate, away from the area affected by **hot fumes** exhausted in the back of the hob. Moreover, it is necessary to provide properly ventilated place for the power supply.

3. USE OF THE HOB

3.1 The startup of the hob should be performed by **an authorized** technician in the **buyer's** place. The hob can be turned on after it is properly installed in the kitchen cabinet countertop, the type of gas is verified, and it is connected to the gas and electric supply systems. After the hob is connected to the gas supply system, it is necessary to check if gas does not leak from the connection.

If an exhaust hood is installed over the hob, then the minimum distance between the hood and the ceramic plate of the hob may not be less than **750 mm**. Before starting the hob, the ceramic plate should be washed with soft cloth and soapy water or a cleaning agent. After the plate dries, the burners can be ignited.

After the startup, due to the combustion of protective lubricants, it is necessary to ventilate the room by opening the window or turning on the mechanical ventilation. This increases the air exchange in the kitchen and allows the faulty smells to be removed.

Before the hob is started up and the individual burners are ignited, the following must be done:

- put the supply cable plug of the power source into the socket of the power supply system and put the low-voltage 12 V cable ending with a round plug in the hob supply socket. The socket is located on the bottom of the hob.

- open the gas cut-off valve.

After the hob is connected to the electric system, it is ready for work, which is indicated by a diode located next to the sensor.

- **after the sensor of the main switch is touched with a finger, its indicator is turned off and the hob is ready to receive instructions. For 5 seconds, all indicators show "0". If we take no further steps, after a while the electronic system of the hob goes into a standby mode, the indicators are switched off and the main switch sensor is turned on again.**
- **TIMER function, touch the burner selection fields twice (Fig.2, no 5,6,7 or 8), touch "+" and "-" two times to select time in minutes (from 1 to 99 min.), the burner stops automatically after selected time**
- **HOT AREA temperature regulation, touch the burner selection fields three times (Fig.2, no 5,6,7 or 8), touch "+" or "-" to select option "1"- temperature over 100C, option "0" (set by default) to select temperature below 100C. Important: the regulation refers to 120mm burners only.**

3.2. Switching on and setting the heating power of burners.

NOTE!!!! - do not switch on the hob burners for a prolonged period without filled dishes put on the hot fields first!!! Otherwise, your device might be damaged.

When you choose any single burner by touching the controller activating field no 5, 6, 7 or 8 on fig. 2 and set the power by touching the power setting slider, no 3, fig. 2, within a range exceeding "0", the selected burner will go on. This is supposed to happen within less than 5 seconds of enabling the controller via on/off sensor - item 13 on fig. 2. If the delay is longer than specified above, the burner will not start and the controller will switch to standby mode until further instruction is received.

All changes of controller program status are accompanied by short sound signals.

To start individual burners of the hob, make sure you do the following:

- Put a filled dish on the relevant hot field.

- Touch the on/off sensor **no 13 fig. 2**. "0" indicators will light up in fields **5, 6, 7, 8**. If you touch the sensor corresponding to the selected burner – **fig. 2**, again, as needed and as indicated on the

heating panel, you start the second stage of burner setting. Slide your finger along the setting slider - **fig. 2 no 3**– to set the required power of the burner. At that time, the power setting display – no **4 of fig. 2** – displays a row of diodes and a digital message shows in the previously selected field, within the range of **0** to **9**, showing the power level set.

As the row of diodes extends and the power level number increases, the burner power increases as well, and opposite – if you slide your finger towards the key symbol, you will reduce the power setting. The row of LEDs will simultaneously become shorter and the numbers displayed are lower, to finally reach “**0**”. “**9**” corresponds to the maximum heating power of the burner, and “**0**” corresponds to no power set.

After 1 to 3 seconds, the burner will start burning gas (the ceramic insert under the heating plate will turn red when fully heated).

*You may also change the burner power in a different way. First activate the selected burner (fields 5, 6, 7,8 of the controller) by touching any location within the power setting control field - **no 3 on fig. 2**. The activated burner’s power will change in increments, to reach the level corresponding to the touching point. Set the power level using this method within not more than 5 seconds. After 5 seconds of completing the last change of pad power, the control pad of the controller will stop receiving further instructions, and a new power value of the selected burner will be set as specified in the preceding step.*

– Follow the same procedure with each burner.

– You may touch the sensors described above at any time to set the desired heating power of burner, in the range from 1 to 9.

– After each change of the selected burner’s power setting, the row of LEDs will light up, then go off after a short time, with only the modified power setting of the active burner being displayed.

When you have started all burners, their power settings are displayed accordingly and the LED row - **no 4. fig. 2** is off. Burners that have not been switched on in the relevant controller field corresponding to the burner indicated on the panel will remain off and not light up.

If the burner heating power level is set from 1 to 9, the burner will operate in pulse mode, meaning that when the burner is not burning gas (several to several tens of seconds in a one minute cycle), the hob uses residual heat and saves gas, thus achieving better gas intake efficiency.

IMPORTANT!

At first (cold) run of burner(s), they heat up during minutes (automatic preheating mode) to heat up the pot and the hob itself, then the hob switches automatically to pulse operating mode.

If the preheating mode is not necessary, one can deactivate it by sliding the finger to any power level for example “**9**” and then to power level “**0**”, then to the desired power level for example “**5**”. The finger should touch the glass all the time during the process

3.3. Operating with intelligent preheating function.

The hob operating status with preheating is a transitory condition for rapid achievement of target temperature of the active hot field, up to the heating power set. It is signaled by the decimal point next to the active burner’s digital indicator (5,6,7,8 fig2).

3.3.1. If any level of heating power is set for the given hot field, the controller display will show a number **corresponding to the power setting**. With this setting, the operating condition with automatic preheating function will start automatically. This status is additionally signaled by decimal point on the display corresponding to the given hot field. It takes up to 18 minutes, depending on the power setting. Then, the hob’s controller switches to automatic heating cycles.

3.3.2. You can change the heating power level of the selected sensor while working with automatic reheating function using the corresponding sensor and following the procedure described above under. **3.2.**

3.3.3. The automatic preheat operating mode of the given burner is controlled by an electronic system.

3.4. Switching off the burners.

In order to switch off any of the operating burners, touch the corresponding sensor, then slide your finger along the slider towards the “key” so that to reduce the burner’s power setting to “0” (gas supply shutdown). During this operation, the row of LEDs (**no 4 fig. 2**) showing the power level goes down and the digits decrease from the level previously set to level “0”. When level “0” is reached and the controller is ready for restarting, the letter “H” will display after a moment, indicating that the panel is hot in the location of the burner that has just been shut down.

You may also switch off the entire hob. To do so, touch the main shutdown switch sensor, or press and hold the power setting slider around zero power for some time, having previously activated the selected sensor for switching down the burner.

All working burners will go off and those just shut down will display the letter “H”.

3.5. Switching the controller lock on and off.

The purpose of controller lock is to secure the hob’s electronic system against accidental startup or changing the power setting of active burner.

To avoid unauthorized activation (e.g. by a child, a drop of water, or an item being placed on a working controller), switching off or changing heating power settings of burner(s), use the controller lock as follows:

- touch the sensor /key/ with your finger - **no 1 fig. 2** at least twice in 2 seconds’ time. When pressed shortly twice, the controller will be locked,
- signaling LED lighting up and a sound signal **no 2 fig. 2** indicating the controller lock status, a long sound signal will be heard simultaneously. The hob controller does not respond to any instructions except for lock status change.

Proceed in a similar way to deactivate the lock status:

- touch the sensor with your finger (**no 1 fig. 2**) twice within up to 2 seconds,
- the signal LED (**no 2 fig. 2**) goes off, the lock is off, and a sound signal is emitted.

3.6. Residual heat indicator.

After a hot field is shut down, it remains hot for a certain time, and the “H” message is displayed. The above applies to all operating burners being shut down.

Do not touch the hot fields during that time, and do not place heat-sensitive items on the hot fields, to avoid the risk of burning

When this indicator goes off, you may safely touch the heating pad.

Cautions - in case of a electricity cut, the residual heat indicator will go off and the pad may still be hot.


Note: “H” also refers to the additional hot area, which means that additional hot field (no 5 fig.1) may be hot as well.

3.7. Choice of pots

To maximize utilization of heat transmitted by infrared radiation emitted by the gas burner, use appropriate dishes that must have:

- diameter similar to hot field size,
- flat bottom of appropriate thickness, min. 4 to 6 mm for stainless steel dishes.

In addition, the dishes must have lids (if allowed by recipe). Make sure the lid does not protrude outside the dish and condensate does not drip on the ceramic panel. You will thus avoid difficult to remove stains on the surface of the panel.

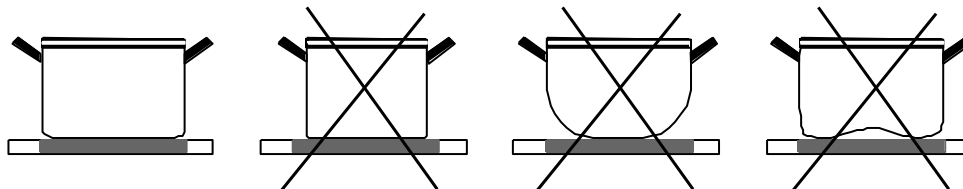

Cooking time is significantly longer for formed-bottom dishes, as the bottom receives only a part of infrared radiation emitted by the hot field.

Place the dishes in the middle of graphically indicated hot field before switching on.

To avoid scratching the surface of the hob's plate, do not move pots with abrasive particles stuck to the bottom, like sand or remnants of cleaning agents

NOTES – for obvious reasons, you are not allowed to:

- *use plastic dishes!!!*
- *use aluminum dishes*
- *put empty dishes on the hob's heating fields when a burner is working!!!*

Do not put dishes on or do not block the combustion gas outlet grate at the back of the hob, particularly when it is working !!!

3.8. Utilization of combustion gas heat.

The GPC-4 ceramic gas plate has additional hot field – **no 6,7** on **fig. 1**, using the heat of combustion gas leaving the burner to the outlet grate situated in the rear part of hob. This hot area can be used for warming up meals that do not require high temperature.

Use of this hot area significantly reduces cooking costs, as we utilize the heat of combustion gas emitted from the burner.

Note:

- *the additional hot area is hot and you must remember it to avoid getting burnt when touching it.*
- *do not allow spilling over and avoid grease splashing on the ceramic plate, as the food remainders and oil can get burnt.*

3.9. Limit of operating time.

To improve operating safety, the hob has a working time limiter for each hot field. The maximum operating time setting is determined automatically according to recently selected heating power setting.

If you do not change the heating power level for a long time, then the corresponding hot field is automatically shut down and the residual heat indicator “H” is activated. However, you can switch on and use the individual burner at any time, according to operating instructions. These max working times are given in **Table 2**.

Table 2.

Power setting	0	1	2	3	4	5	6	7	8	9
---------------	---	---	---	---	---	---	---	---	---	---

Maximum heating pad operating time (hours)	0	10	5	5	4	3	2	2	1	1
--	---	----	---	---	---	---	---	---	---	---

4. CLEANING AND MAINTENANCE OF THE HOB

REMARK: *All the activities related to the cleaning of the ceramic plate must be performed after the plate cools down to an ambient temperature.*

4.1 Cleaning the ceramic plate

When cleaning the ceramic plate, it is necessary to follow the same rules as those for cleaning glass surfaces. Do not use abrasive or aggressive cleaning agents, scrubbing sand, or sponges with scratchy surfaces. Using such materials can cause irreparable scratches on the surface of the ceramic plate.

4.2 Cleaning after each use

- **Slight, not-scorched** stains should be wiped off with a damp cloth without a cleaning agent. Using dishwashing liquid may cause bluish discoloration. These persistent stains cannot always be used at first try, even using a special cleaning agent.
- **Sticky stains** should be removed with a sharp scrubber. The surface should then be wiped with a damp cloth with special protective agent.
- **Removing stains**
 - **Light stains, with a pearly color (aluminum residue)** can be removed from a cooled ceramic plate with a special cleaning agent. Calcium residues (caused, e.g. by boiling water) can be removed with vinegar or a special cleaning agent.
 - **When removing sugar**, food leavings containing sugar, plastics, or aluminum sheet, one must not turn off a given heating field! It is necessary to immediately precisely scrape off the leaving (**while they are hot**) with a sharp scraper from a hot heating field. After the stain is removed, one may turn off the stove and clean the cooled ceramic plate with a special cleaning agent.

Special cleaning agents can be purchased in department stores, special stores with electric equipment, in drugstores, and grocery stores. Sharp scrapers can be purchased in home supply stores, construction equipment stores, and painting supply stores.

A cleaning agent must never be applied on a hot ceramic plate.

Special cleansing agents are available at department stores, specialist stores selling electrical and engineering devices, in drugstores, grocery stores. Rough scrapers are available in DIY stores, shops selling construction equipment or painting accessories.

It is better to allow the cleansing agents to dry, then wipe them with wet cloth. Never apply cleansing agent on hot ceramic panel. Any remaining cleansing solution should be wiped off with moist cloth before heating again. Otherwise, it may have an aggressive impact on the ceramic panel.

We take no responsibility for guarantee claims if the ceramic panel of cooker is not operated properly.

Warning!

If you notice any cracks on the panel's heating pads, put off the cooker immediately and call service.

- Cleaning of the hob grids and black aluminium frame

I. The fume exhaust grids should be cleaned, the same as the ceramic plate, with a damp cloth and a little dishwashing liquid, and then wiped dry with a cloth.

2. It is not allowed to use acidic or abrasive cleaning agents.
3. Cleaning should be performed only after the surface to be cleaned is cooled off, the same as in the case of the ceramic plate.
4. A fume outlet made from enameled steel should be cleaned, after it cools down.

4.3. Control and supervision over gas, electrical and ventilation systems

To ensure proper and safe operation of your hob, please check the condition of the gas, electrical and ventilation systems. The scope of inspection should cover:

- checking the technical condition of the aforementioned systems,
- notifying the building administrator of any doubt concerning the technical condition of these installations.

5. INSTRUCTIONS FOR THE INSTALLER

5.1. General.

Activities related to hob installation, connection to gas and electrical systems and adjusting hob burners to a different type of gas **can only be carried out by a properly trained and certified worker.**

Upon completion of the aforementioned activities, the installer must acknowledge their completion (list of activities, date, signature and company seal) in the hob's guarantee document, which is the basis for retaining guarantee and warranty rights for the hob. Otherwise, your guarantee will be voided.

Before commencing hob installation and connection to the gas and electrical systems, the installer must make sure that:

- the room in which the hob will be used conforms to the requirements of standards (size, dimensions, location of hob),
- the gas and electrical installations are properly built

Note:


After installing the hob, the installer must carry out initial startup. During initial startup, squealing can be heard at combustion gas outlet. This is normal, caused by gas feeding to gas tubes and burner. It will disappear after first startup.

5.2. Adapting the hob for different type of gas

If the hob needs to be adjusted to a different type of gas than the standard one, replace gas nozzles in all burners with items appropriate for the given type of gas, according to list of nozzles in the Technical Specifications of these Operating Instructions (**item 1.2**) and set the volume of input air with a diaphragm, setting the gap for dimensions as specified in **Table 3**.

Nozzles can only be replaced by a trained installer.

Table 3.

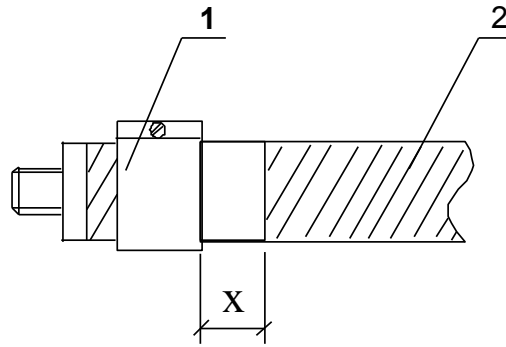

1 – diaphragm; 2 – burner tube

Gas type	Diaphragm distance from pipe edge – X (mm)		
	Small burner	Medium-sized burner	Large burner
G20, G27	6	9	no diaphragm
G235	5	8	no diaphragm
3B/P	4	7	no diaphragm

5.3. Maintenance and inspection of hob's components

If the hob is operated in accordance to these instructions, cleaned and maintained according to the description presented in sub-clause 4.1, - then the hob that works properly does not require inspection.

6. HANDLING DEFECTS – error signaling

Please read the following guidelines before calling the manufacturer's service technician:

- **The reheating hot area heats up but does not glow during operation of the hob.**
- Regular bursting noise of spark generator and valve can be heard while starting up the heating pad before gas is lit.
- Individual hot field may glow with varying power.

These occurrences and sounds are normal in an operating hob.

The burner located under the hot field controls its temperature through switching on and off. When low heating power setting is chosen for the hot field, the burner will go off for a longer time, or for a shorter time in case of higher heating power, accordingly.

In case of gas pressure drop in the network or cylinder, the hob will be automatically switched off. This is signaled by the letter "G".

7. CONTROLLER ALARM MODE SIGNALING

Alarm mode may display as a result of faults in hob operation, or gas shortage in network.

Identifications of alarm conditions and controller's signals are given in Table 4.

Table 4.

Reason	identification	Condition signal
--------	----------------	------------------

flame presence signal after switching on the valve	Alarm G	Letter " G " on controller indicators, showing in the field corresponding to the burner without flame. Restart hob.
No flame decay signal after switching off the gas valves. Flame decay waiting time is 5 seconds.	Alarm C	Letter " C " on the controller display at the burner where flame decay was not observed. The controller is locked and the gas supply is shut down. If the burner works after deactivating the burner, shut the main gas valve and call service
Overheated controller, no ventilation, or concealed combustion gas outlet.	Alarm D	Letter " D " on controller display. It remains until the hob cools down to working temperature.
Spill over alarm	Alarm E	A liquid spilled over or any two touch fields were activated at the same time (for example when cleaning the glass)

Additional information:

The following will be delivered together with your hob:

- Power supply adapter.

Our service center's phone no.: **+48 074 856 52 88**
serwis@solgaz.com.pl

correspondence address: SOLGAZ Sp. z o. o.
58-124 Marcinowice
ul. Spoldzielcza 3
Poland

TYPE: GPC – 3

SERIAL NUMBER.....

INSTALLERS SIGNATURE.....

DATE: